

Digital Lock for MicroCool™ Refrigerator Station Mode Instructions



Table of Contents

1. Warranty and Return Policy
2. Getting Started
3. Station Mode Programming Instructions
4. Double Digit Codes
5. Switching Modes

Please read this manual carefully before starting the machine. Keep it in a safe place for future reference. If the device is resold, this manual must be handed over to the purchaser along with the device.


1 **Warranty and Return Policy**

Creche Innovations warrants the MicroCool™ Digital Lock to be free from defect in materials and workmanship for a period of two years from the date of shipment to the user. If the product fails to perform in accordance with the product specifications, Creche will repair or replace, at its option, the defective materials or parts. Creche will pay customary freight charges from Creche to the customer location only. This warranty does not cover damage caused by accident, misuse, abuse, alteration and other defects not related to material or workmanship. To exercise your rights under this warranty, contact Creche Innovations.

The user/owner must operate the equipment in strict accordance with the most recent User Manual and any additional training or training materials provided by Creche designated representatives.

The user/owner of this equipment shall have sole responsibility and liability for any injury to person or damage to property resulting from: 1) Operation not in accordance with supplied operating instructions, 2) Maintenance not in accordance with authorized maintenance instructions, 3) Service by anyone other than a factory authorized representative, 4) Modification of the equipment or accessories, 5) Use of damaged or unauthorized components and accessories and 6) Improper installation.

2 Getting Started

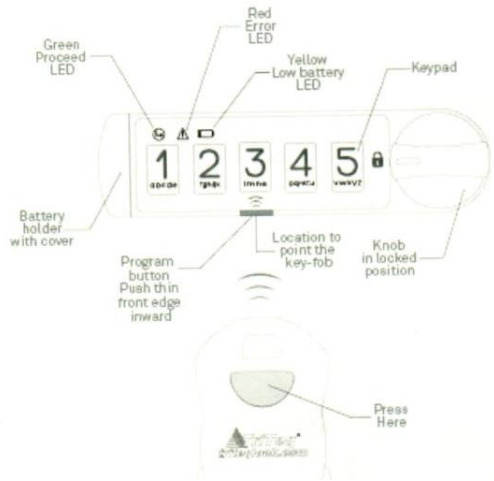

Program Button:

Initiate the lock programming mode by pressing the front thin edge of the black button inward toward the mounting surface the MicroCool™ Digital Lock is mounted to.

Infrared Receiver:

The Infrared Receiver will receive a signal from an electronic MicroCool™ Key Fob when it is pointed at the receiver located behind the Program button. The Program button is slightly opaque so the key-fob signal will penetrate the button.

Knob:

To move the lock mechanism 90 to 180 degrees clockwise or counterclockwise from the lock and unlocked states

The factory master code is: **135243**
The factory supervisor code is: **123**

Multiple Levels of Access:

1. Master code and/or blue control key fob
2. Supervisor code and/or black key fob
3. User code and/or black key fob

The MicroCool™ Digital Lock is pre-programmed with a factory master code and factory supervisor code.

Operation

1. Unlock with a code by entering a valid code. The **green** LED will illuminate
2. Turn the knob to unlock
3. To lock, turn the knob to align the knob pointer with the lock icon on the keypad.

3 Station Mode Programming Instructions

**** Make sure to write down all the new codes you create for future use.****

Change the Master Code (6 Digits) using the Factory Master Code

1. Push the black program button (located on the side of the lock) **5** times
2. Enter the **factory master code** (135243) **2** times
3. Enter **your new master code** (must be 6 digits long) **2** times.
4. The lock will blink **6** times to indicate that the factory master code was erased and **your new master code** was accepted.

Change the Supervisor Code (3-6 Digits) using the Factory Supervisor Code

1. Push the black program button **1** time
2. Enter the **factory supervisor code** (123) **1** time
3. Enter **your new supervisor code** (must be 3-6 digits long) **1** time
4. Push the black program button **1** time
5. The lock will blink **6** times to indicate that the factory supervisor code was erased and **your new supervisor code** was added.

Add a User Code (3-6 Digits) using the Supervisor Code

1. Push the black program button **2** times
2. Enter your **supervisor code** **1** time
3. Enter the new **user code** **1** time
4. Push the black program button **1** time
5. The lock will blink **6** times to indicate that your supervisor code was used to add the new user code

Change your current Master Code (6 Digits)

1. Push the black program button **5** times
2. Enter **old** master code **2** times
3. Enter **new** master code **2** times
4. The lock will blink **6** times to indicate that old master code was erased and new master code was accepted.

Change the Supervisor Code (3-6 Digits) Using a Supervisor Code

1. Push the black program button **1** times
2. Enter **old** supervisor code **1** time
3. Enter **new** supervisor code **1** time
4. Press the black program button **1** time
5. The lock will blink **6** times to indicate that the old supervisor code was erased and the new supervisor code was accepted

Remove the User Code Using the Supervisor Code

1. Push the black program button **2** times
2. Enter the **supervisor code**
3. Enter **1 1 1 1 1**
4. Press the black program button **1** time
5. The lock will blink **6** times to indicate that the supervisor code was used to remove the user code. *The user code will no longer be valid for access.*

Add a Control Fob

1. Push the black program button **1** time
2. Enter the **master code**
3. Point the control fob at the black program button and press the fob button
4. The lock will blink **6** times to indicate that the master code was used to add a control fob

Add a Supervisor Code (3-6 Digits) Using the Control Fob

1. Push the black program button **1** time
2. Point the control fob at the black program button and press the fob button
3. Enter **supervisor code**
4. Push the black program button **1** time
5. The lock will blink **6** times to indicate that the supervisor code was used to add a control fob

Add a Supervisor Fob Using the Master Code

1. Push the black program button **1** time
2. Enter the **master code**
3. Point the **Supervisor Fob** at the black program button and press the fob button
4. The lock will blink **6** times to indicate that the master code was used to add a supervisor fob

Add a Supervisor Fob Using the Control Fob

Your control fob is blue and your supervisor fob is black

1. Push the black program button **1** time
2. Point your **Blue Control Fob** at the black program button and press the fob button
3. Point your **Black Supervisor Fob** at the black program button and press the fob button
4. The lock will blink **6** times to indicate that a control fob was used to add a supervisor fob

Add a User Fob Using the Supervisor Code

Your user fobs are black

1. Push the black program button **2** times
2. Enter the **supervisor code**
3. Point the **Black User's Fob** at the black program button and press the fob button
4. The lock will blink **6** times to indicate that the supervisor code was used to add a user fob

Add a User Fob Using the Supervisor Fob

1. Push the black program button **2** times
2. Point the **Blue Supervisor Fob** at the black program button and press the black program button
3. Point the **Black User's Fob** at the black program button and press the fob button
4. The lock will blink 6 times to indicate that the supervisor fob was used to add a user fob

Remove the User Fob using the Supervisor Code

1. Push the black program button **2** times
2. Enter the **supervisor code**
3. Press **1 1 1 1 1**
4. Press the black program button **1** time
5. The lock will blink **6** times to indicate that the supervisor code was used to remove the user fob. *User fob will no longer be valid for access.*

Remove the User Fob using the Supervisor Fob

1. Push the black program button **2** times
2. Point the **Blue Supervisor Fob** at the black program button and press the fob button
3. Enter **1 1 1 1 1**
4. Push the black program button **1** time
5. The lock will blink **6** times to indicate that the Supervisor Fob was used to remove the User Fob. *The User Fob will no longer be valid for access.*

Unlock with a Fob

1. Point either the **Blue Supervisor Fob** or the **Black User's Fob** at the black program button and press the fob button.
2. Turn the knob to unlock the lock

4 Double Digit Codes

The numbers 6, 7, 8 and 9 can be entered by pressing two keys simultaneously in order to produce a sum. For example 2 and 4 can be pressed simultaneously to produce the number 6 ($2+4=6$). Note, if the code was programmed using 2+4 as the 6 digit, the 2+4 must be used when accessing the lock, because other combinations that equal six such as 1+5 are distinguished from 2+4.

5 Switching Modes

Note: The Master Code is retained when switching modes

1. Unlock the MicroCool™ Digital Lock and turn the knob to the unlocked position
2. Remove the battery for **10** seconds
3. While holding the program button, reinsert the battery and wait until all 3 LED's fade in and fade out simultaneously
4. Release the program button
5. Enter the 6 digit master code. When the master code is entered correctly the yellow LED will illuminate
6. Press button number **2** – two times for LOCKER Mode
7. Once the lock switches modes, the LED's will flash **green, yellow, red**
8. Proceed to operate the lock in the selected mode

New Codes Log



Creche Innovations
17745 Metcalf, Building One
Stilwell, KS 66085
(913) 948-6290 – phone
(913) 948-6296 – fax
www.CrecheInnovations.com