




Instructions For Replacing MicroCool Digital Push Button Lock

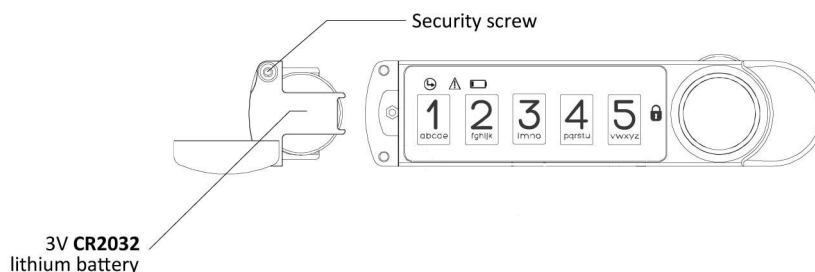

1. Lift battery cover and turn out of way.
2. Remove security screw.
3. Make sure battery cover is all the way pull out.
4. Pull on battery holder and remove from lock case.
5. Remove the old battery from battery holder.
6. Install new battery into battery holder.
7. Lift battery cover and push back into lock case.
8. Tighten security screw.
9. Turn battery cover and push down to snap in place.